




## HYPERLOCK FITTING INSTRUCTIONS


Harnesses equipped with the Ride Engine Hyperlock spreader bar system offer near-infinite adjustability for a perfect fit. To ensure the best fit, start by referring to the Ride Engine harness size chart available on the product page. Once you've identified your size, achieving the ideal fit is straightforward by following these steps:

### USING HYPERLOCK

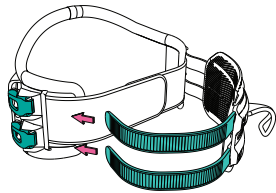


#### PUTTING ON THE HARNESS

Place the spreader bar ladder straps into the side ratchet buckles.

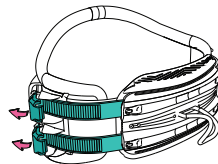


#### OPENING UP THE SPREADER BAR

To release tension or fully open the spreader bar, lift the front of the ratchet.

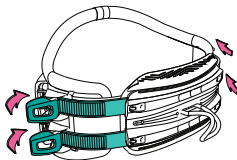

#### ADJUST YOUR TENSION


To add tension to the spreader bar, push the lever forward on the ratchet mechanism. You will hear a clicking sound, which indicates that you are increasing the tension. Apply tension to both sides evenly to achieve a balanced and centered position for the spreader bar.

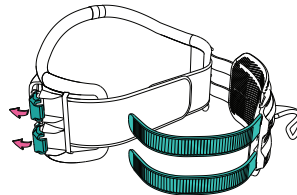

#### REMOVE THE SPREADER BAR


For optimal results, it is recommended to lift both the top and bottom ratchets simultaneously. This ensures a synchronized release of tension, allowing you to easily open the spreader bar.

### ADJUSTING HYPERLOCK

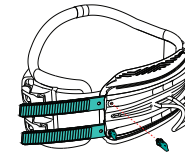

#### ADJUSTING LADDER STRAP LENGTH

To adjust the length of the HyperLock ladder straps, begin by unscrewing the front thumb screws completely. This will loosen the ladder straps and allow it to be fully removed.

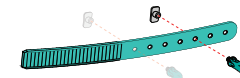

#### MOVING THE T-NUTS

Move the backing T-Nut bolt to the desired adjustment hole. This will secure the ladder straps in the desired length position.

