




## Installation Instructions

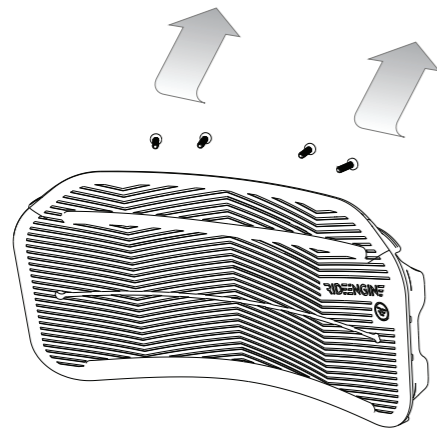


**1** Separate the Hyperlock spreader bar hook by removing the 4 front screws.

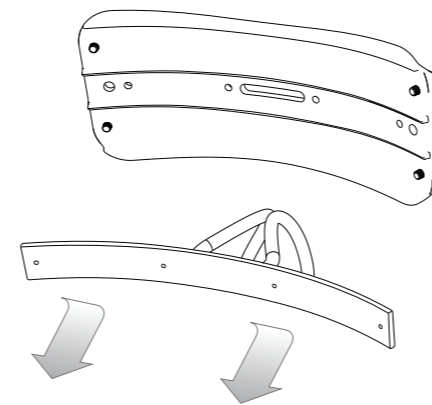


**2** Remove the fixed hook by pulling it through the back of the spreader bar using a lever action. This will slide the hook through the spreader bar hole. The hook will then come out through the EVA pad at the back (hidden in this drawing).

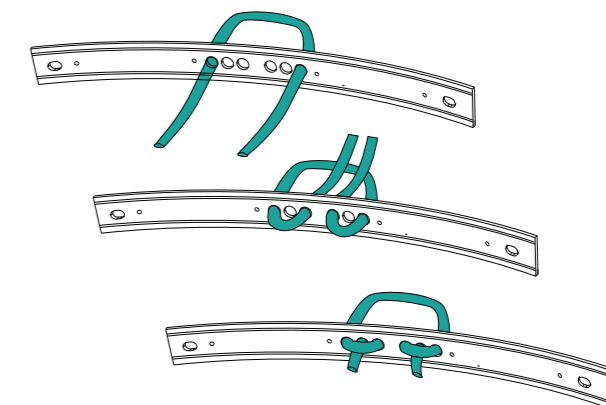


**3** The Mini Loop Rope comes pre-installed on the spreader metal bracket. If you need to replace it, install it by threading the Mini Loop Rope through the outer mini-loop holes, then through the inner holes, and finally back through the center hole. Adjust to the desired length.

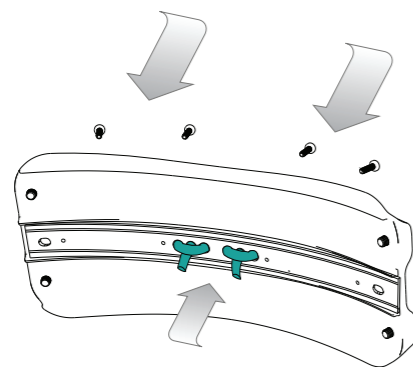

**4** Install the rope spreader bar metal bracket between the spreader bar plate and the EVA pad. Reinsert the initial 4 screws, ensuring they are straight to prevent stripping the threads.

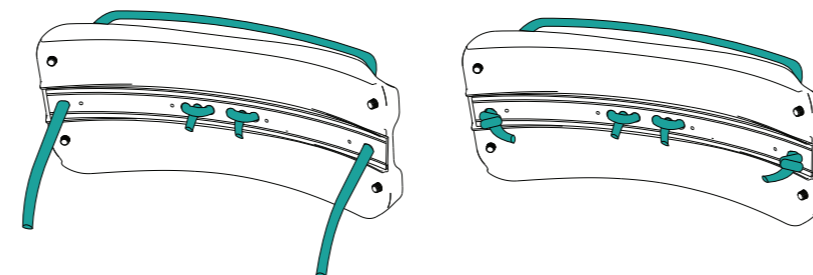

**5** Thread the long rope through the holes on the front of the spreader bar. Secure each end of the rope with a tight overhand knot, then tuck the knot tails into the spreader bar cavity. Hide the knots between the spreader bar plate and the EVA padding.

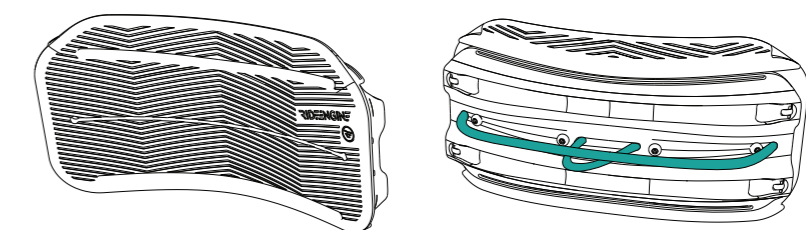

**6** Ensure your installation is neat and tidy, and you're all set.